# Weathertex INSTALLATION MANUAL

**WEATHERGROOVE PANELS** 



EXTERNAL CLADDING 2022

# Contents

Introduction	n	3
Accreditat	ions	4
1 GENERA	L INSTALLATION INFORMATION	5
1.1	L INSTALLATION INFORMATION	5
1.2	Fire Rated Wall Systems	
1.3	NCC Compliance	7
1.4	General Requirements	
1.5	Painting: Pre-Primed	11
1.6	Staining: Natural Range	12
1.7	Maintenance	
1.8	Steel Frames	14-15
1.9	Cavity System	16-17
1.10	Physical Properties	18
2 WEATHER	RGROOVE PANELS	19
2.1	Weathergroove Panels	19
2.2	Accessories	20-21
2.3	Fasteners	22-23
2.4	Installation	24-26
MANUFACT	TIRERS WARRANTY	27

#### ALL OTHER WEATHERTEX PRODUCTS

To view and read all other Weathertex product installation manuals visit weathertex.com.au

### Introduction



#### **MADE IN AUSTRALIA**

Family owned and manufactured in the Hunter region, NSW since 1939.



#### **SAFE**

Low VOC. Meets Australian Building Standards. 100% natural product. CodeMark Australia certified - Weathergroove. No added silica, glues, resins or formaldehydes.



#### **TRUSTED**

Weathertex voted #1 MOST TRUSTED brand in the building industry by Architecture & Design latest survey. Won SUPPLIER OF THE YEAR in the Australian Construction Awards.



#### STYLISH CHOICES

A wide selection of profiles available in various styles, textures and sizes. Easy to incorporate the natural with primed profiles together to offer multiple design options. Curved walls can be achieved down to a minimum of 7m for Weathergroove.



#### **SUSTAINABLE**

Better than zero carbon footprint with Third Party Credentials -GreenTag certification, PhD, PEFC. Low embodied energy.



#### **VALUE FOR MONEY**

No special tools required for cutting. Large panels and lower wastage costs on Weathergroove Range. Lightweight product - reduces labour costs.



#### **DURABLE**

Termite Resistant. Warranty tried and tested not to rot, split or crack for up to 25 years. Natural range is the only timber product in the market to provide a 10 year warranty. 1000 kg/m3 product density with a minimum 32MPa rating. Watertight – mechanical flashing and joining accessories mean that sealant control joints are seldom required.



#### **QUICK & EASY INSTALLATION**

Larger panels for quick installation. 9.5mm thickness and matching accessories across all products making it easier to mix multiple profiles within a project. Easier to paint than other materials on the market due to its smoother surface.



### Accreditations

The CodeMark Certification Scheme (the Scheme) is a voluntary third-party building product certification scheme that authorises the use of new and innovative products in specified circumstances in order to facilitate compliance with Volumes One and Two of the NCC, also known as the Building Code of Australia or BCA.

CodeMark provides confidence and certainty to regulatory authorities and the market through the issue of a Certificate of Conformity, which is one of several options available for meeting the 'evidence of suitability' requirements of the BCA.

#### Our 'Green' Accreditations

A rigorous life-cycle evaluation has been conducted by Global GreenTag International to determine the 'environmental performance' of our products. We are proud to announce we have been the FIRST GLOBAL manufactured product to receive their highest Platinum certification for our Natural Range and a Gold certification for all our flat primed profiles.



The industry relies on a number of stakeholders to keep projects moving. Supplier of the year is a company that provided quality, on time, every time.

A&D's Most Trusted Brand Award x 2 consecutive wins (2016 &

<u>2018).</u> Architecture and Designs 'Top Trusted Brand' biennial survey reveals Australia's top brands within the architecture, building, construction and design industries

Weathertex sources timber from sustainably managed forests and controlled sources audited under the Australian Forestry Standard (AFS) and Certified by PEFC: the world's largest forest certification scheme.

Whether you are seeking timber cladding for a renovation, extension, new home, or commercial application, Weathertex weatherboards and architectural panels offer an endless variety of timber cladding solutions and styles.

A better choice, naturally.





#### NATURAL RANGE

IS PLATINUM GREENTAG CERTIFIED.

#### PRIMED RANGE

IS GOLD GREENTAG CERTIFIED.

THE FIRST MANUFACTURED PRODUCT GLOBALLY TO ACHIEVE PLATINUM GREENTAG™ CERTIFICATION







RESPONSIBLE WOOD CERTIFIED

This product is from sustainably managed forests and controlled sources.



Quality Endorsed Company

ISO 9001 Lic1864



















# 1.1 Product Information

1.1.1 DIMENSIONS AND PACKAGING										
ARCHITECTURAL PANELS		LENGTH (mm)	WIDTH (mm)	UNITS PER PACK	CONTENTS m <sup>2</sup>					
Weathergroove Panels 12 x 4		3660	1196	24	105.1					
	9 x 4	2745	1196	24	78.8					
	8 x 4	2440	1196	24	70.0					



### 1.2 Fire Rated Wall Systems

Weathertex has been assessed by an Accredited Testing Laboratory, that the attachment of Weathertex 9.5mm cladding systems detailed in Table 1.2.1 over plasterboard timber and steel plasterboard lined walls that has been either tested or assessed to achieve an FRL up to and including 90/90/90, would not detrimentally affect the FRL of the underlying wall system if testing in accordance with AS 1530.4:2014.

#### 1.2.1 TABLE - ALLOWABLE FIXING OPTIONS OVER PLASTERBOARD FRL SYSTEMS

	UNDERLYING PLASTERBOARD SYSTEM		
CLADDING SYSTEM	TIMBER FRAMING	STEEL FRAMING	
Direct fix	✓	X	
9.5mm Weathertex cavity system	✓	Х	
20mm Pine batten cavity system	✓	✓	
35mm Pine batten cavity system	✓	✓	
45mm Pine batten cavity system	✓	✓	
Steel top hat (min 0.55 BMT G550)	✓	✓	

These fire rated wall systems are detailed by the relevant system manufacturer such as USG Boral. Advice of the system manufacturer should be sought on the appropriate system for your project.

All walls must be designed for the applied loads. For load-bearing walls and walls subject to wind pressures, walls shall be designed to the appropriate Australian Standards or construction manuals. Designers should consider Axial Capacity Reduction (ACR) from charring or loss of steel strength due to heat. Guidance on structural design can be sought from the relevant FRL system manufacturer.

Standard installation requirements in this installation guide apply to the installation of the Weathertex external cladding component. Fastener lengths must be increased by the thickness of all packing materials used between the structural frame and Weathertex.

#### USG BORAL Systems+ OUTERWALL.





EXAMPLE FRL SYSTEM DESCRIPTION (60/60/60 Outside only)

#### **EXTERNAL WALL SIDE**

- Weathertex 9.5mm Cladding
- Vapour permeable membrane
- 1 layer 16mm FIRE WETSTOP

#### **CAVITY INFILL:**

R2.5 GW Wall Batts

#### INTERNAL WALL SIDE

1 layer of 10mm STANDARD Plasterboard

# 1.3 NCC Compliance

Evidence of Suitability supporting the use of Weathertex to meet relevant Performance Requirements and Deemed-to-Satisfy requirements are available. Please contact the Weathertex technical team (ph:1800 040 080) for relevant compliance documentation or visit our website - weathertex.com.au.



## 1.4 General Requirements

The following installation instructions and guides are in addition to local and state regulations and the requirements of the National Construction Code (NCC). Weathertex provides construction detail drawings which should be used in conjunction with the instructions in this installation manual.

**NOTE**: All diagrams in this installation manual are for demonstration purposes only. Diagrams may omit some components for clarity.

Deviation from standard applications and requirements detailed in this Installation Manual or supplementary Weathertex Construction Details may void the manufacturer's product warranty. The product specific installation instructions in this manual are applicable to steel and timber frames for both direct fix and cavity systems. Preparation steps must be followed for direct fix to timber frame, ventilated cavity construction and steel frame construction.

#### 1.4.1 STORAGE AND HANDLING

Weathertex products should be stored flat, under cover and on timber bearers spaced at maximum 600mm centres. When storing Weathertex outside, keep the stack clear of the ground and cover with waterproof materials to prevent water staining. **NOTE:** Weathertex factory stretch wrap is not designed to keep stored product weatherproof and should not be relied upon for primary weather protection.

Anodised aluminium products should be stored in a dry and flat position away from any potentially corrosive or incompatible materials. Timber or soft bearers at a distance no more than one metre apart should be used to support the product. Continuous exposure to moisture will promote corrosion. Metal edges and cut corners of the product can be sharp and may cause personal injury if not handled safely. Wear eye protection, gloves and protect skin when possible and when cutting avoid air borne metal fragments.

#### 1.4.2 CUTTING AND WORKING WITH WEATHERTEX

Weathertex products are easy to cut and shape with a normal hand or power saw. Weathertex may be stacked two or three high for multiple cutting. Where required, edges may be trimmed with a smoothing plane or sandpaper. Holes are easily drilled with high speed drills or clean cutter bits. For best results break cut edges with a 2mm chamfer. Clean all dust from flashing as work progressed, as it may mix with water and create a brown runoff. Cut edges, holes and countersinks must be re-primed with a high quality tannin blocking exterior timber primer (water or solvent based). Excluding our Natural range.

The normal health and safety precautions should be taken when working with wood panel products. Machining equipment should be fitted with dust collection devices and used in well ventilated areas. Follow good hygienic and housekeeping practices. Wood dust can be vacuumed, shovelled or swept to avoid accumulation. If dust levels exceed Safe Work Australia Standards the wearing of a dust mask (AS 1715 and AS 1716) and safety glasses (AS 1337) is recommended. Storage and work areas should be adequately ventilated.

A Safety Data Sheet is available for download on the Weathertex website: weathertex.com.au

#### 1.4.3 SITE, FOUNDATION AND FRAMING

Foundation design must comply with AS 2870 "Residential Slabs and Footings - Construction" and the National Construction Code (NCC). Timber or steel frames shall comply with the NCC. Where applicable, timber frames shall be constructed in accordance with Australian Standard 1684 - Residential Timber - Framed Construction. Steel frames must be erected in accordance with the manufacturer's requirements. Frames shall be straight and true with studs at a maximum of 600mm centres. Timber shall be seasoned, as unseasoned timber is prone to shrinkage and can cause sheets and frames to move.

#### 1.4.4 GROUND CLEARANCES

Lower framing timbers must be isolated from ground moisture by suitable damp-proof courses (DPC) or termite shielding. Similarly, architectural panels must not be placed in direct contact with masonry, brickwork or concrete. Where necessary, use strips of Alcor to isolate the materials. The bottom edge of Architectural Panels must be kept clear of paved surfaces by a minimum of 100mm and a minimum of 225mm for unprotected ground (i.e. grass, gardens etc). Architectural panels must extend a minimum of 50mm below the bearer or lowest horizontal part of the of suspended floor framing for a suspended floor system. The grade of adjacent finished ground must slope away from the building to avoid the possibility of water accumulation. Typically this is a minimum slope of 50mm over the first metre, however please refer to the minimum slope required from local building codes and regulations. Weathertex must not be installed in wet areas and where it comes in contact with standing water.

**NOTE**: To comply with termite protection provisions a greater clearance may be required. See 'Weathertex and Termite protection' in section 1.4.10.

#### 1.4.5 LENGTH OF WALL REQUIREMENTS

For continuous walls less than 5.5m, all product specific joining methods may be used. On continuous walls greater than 5.5m, traditional, concealed & aluminium joining methods must only be used. For continuous walls greater than 11m long, engineers/designers must assess additional requirements for frame and cladding control joints, alternatively please call Weathertex (Ph 1800 040 080) for additional advice.

#### NOTES:

• For specific joining methods applicable to each product, refer to specific product section.

#### 1.4.6 MOISTURE MANAGEMENT AND FLASHING

Weathertex architectural panels are intended for use as internal and external cladding in standard stud wall systems. It is the responsibility of the Designer or Specifier to identify moisture related risks associated with any particular building design. Wall construction and design must effectively manage moisture, considering both the interior and exterior environments of the building, particularly in buildings that have a high risk of wind driven rain or are artificially heated or cooled. Adequate design of ventilation, flashings and moisture management systems must ensure that the wall cavity and the back of the Weathertex board will remain dry at all times.

In addition, all wall openings, penetrations, junctions, vertical and horizontal joins, connections, window heads, sills and jambs or other components, must incorporate appropriate NCC complying flashing for waterproofing to prevent moisture exposure on the back of the Weathertex. Flashing materials and methods must comply with the requirements of Weathertex, and where flashing materials are not specified by Weathertex refer to the Australian Standards &/or NCC. Failure to appropriately flash all penetrations will void the Weathertex Manufacturer's Warranty.

On walls projecting from the roof line in upper storey construction, keep the bottom edge of Weathertex cladding 70mm clear of the lower storey roof claddings. Weatherproof with an approved flashing. For product specific details please refer to the relevant construction details on weathertex.com.au.

#### 1.4.7 WALL SARKING REQUIREMENTS

Vapour permeable membrane must be used under all Weathertex external wall systems. The vapour permeable membrane allows for the controlled escape of vapour from within the building whilst restricting the ingress of liquid moisture.

Weathertex recommends the use of Vapour permeable membrane in conjunction with the Weathertex Cavity Installation System to provide the best protection against condensation problems such as mould, timber rot, corrosion and loss of thermal resistance. Resources such as the ABCB Condensation Handbook and NATSPEC offer general information on condensation principles.

**NOTE**: Soft compressible products such as insulation installed directly between the front of the wall studs and Weathertex cladding is not compatible with Weathertex products and will void the product warranty.

SARKING REQUIREMENTS FOR CLIMATE ZONES 2 - 8							
Material Standard	AS/NZS 4200.1						
Installation Standard	AS 4200.2						
MANDATORY PROPERTIES							
Vapour Resistance	Class 4						
Water Barrier	Passing AS/NZS 4201.4						
Flammability index	NOT MORE THAN 5						

<sup>\*</sup>sarking products are unsuitable if classed as a "Non-water Barrier" as per AS/NZS 4200.1 clause 5.3.5. and will void the Weathertex product warranty.

### 1.4 General Requirements

#### 1.4.8 RECOMMENDED VAPOUR PERMEABLE MEMBRANE PRODUCTS

The permeability and vapour resistance of materials should be considered in the context of their application. The designers/ architects/engineer should consider strategies to mitigate condensation risks in the design with relevance to local climate conditions. Suitable membrane products for moisture control in hot wet and humid conditions (Climate Zone 1) should be discussed with the membrane manufacturer.

Recommended accessories required for AS 4200.2 installation are Waterproofing tapes such as Bradford Enviroseal™ HighTack Adhesive Tape & Pro clima TESCON EXTORA® or equivalent, and Sill tapes such as Enviroseal™ Proctorwrap SLS Flexi Tape & Pro clima TESCON EXTOSEAL® or equivalent.



#### 1.4.9 CONSTRUCTION DETAILS

Please refer to the Weathertex website for the complete suite of construction details for all products and applications weathertex.com.au

#### 1.4.10 WEATHERTEX AND TERMITE PROTECTION

The NCC specified the requirements for termite barriers. All of these requirements must be satisfied. Where the exposed slab edge is used as a part of the termite barrier system, a minimum of 75mm of the exposed slab edge must be visible to permit ready detection of termite entry.

Weathertex currently provides a warranty which protects against a variety of conditions including (but not exclusive of) the product supplied being fit for purpose, and will not rot, split or crack. In addition to this, Weathertex is warranted against termite attack, provided the following conditions are adhered to.

A termite mitigation plan complying with all local, state and federal requirements and best-practice guidelines must be in place and maintained from the time that the Weathertex is delivered to site and for the life of the product. Provided that the plan and its maintenance can be demonstrated, the normal Weathertex warranty at the time of purchase will apply to the Weathertex.



BLACKBUTT

STANDARD HARDWOOD

RED MAHOGANY

WEATHERTEX

Samples removed from Termite Test after 2.5 years exposure

### 1.5 Painting: Pre-Primed

#### 1.5.1 PRE-PRIMED PRODUCTS

#### PRIMER:

Weathertex factory primer is designed to be painted within 60 days of installation. Failure to do so can result in poor topcoat adhesion and will void warranty. Lightly sand any nibs or blemishes which have occurred during fixing. Cut edges, holes and countersinks must be re-primed with high quality tannin blocking exterior timber primer (water or solvent based). A spray primer is the most efficient method. It is also good practice to prime any timber mouldings, including corner stops and trims.

Trimtec aluminium accessories are protected by an anodised coating and can be left unpainted if desired. Due to their smooth surface, aluminium accessories should be etch primed if a topcoat is to be applied.

#### SURFACE PREPARATION - CLEANING & WASHING:

Clean surface of primed Weathertex products using a soft broom or soft lint-free cloth and wash down with sugar soap to remove salt, dirt, dust and grease or airborne contaminates. Do not vigorously scrub the surface nor use an abrasive or strong cleaning agent as you may burnish the paint surface and mark the primer finish. Wash down with fresh water and dry the surface with one final wipe using a soft dry lint-free cloth in the direction of the paint flow. Do not use high pressure washers as this can cause coating damage and water ingress into the wall cavity.

Not allowing the Weathertex to dry before painting is a common cause of paint failure. Failure to clean the surface may result in poor adhesion with topcoat and may void warranty.

#### 1.5.2 PAINTING PRE-PRIMED PRODUCTS

#### PAINTING:

The primed surface of Weathertex products are suitable for the application of exterior grade water or solvent based topcoat paint systems. It is recommended to apply selected coating to a test area to confirm suitability. If compatibility of the selected topcoat is an issue, the surface may be primed with a suitable tannin blocking exterior primer per the coating manufacturer's recommendation before painting. Contact the paint manufacturer for advice or information.

When top coating, apply a minimum of two coats of paint in accordance with the paint manufacturer instructions for mixing, film build, coverage and drying between coats. Temperature and wet weather will affect curing of coatings and consideration of site conditions at the time of painting is essential to ensure proper curing and adhesion. Paint additives may adversely affect the coating adhesion and durability and should only be used with the endorsement of the coating manufacturer.

#### PAINT COLOUR:

Weathertex hardboard products have 50 years proven durability in the harshest of climate zones. While there is no restriction on the vast array of colours to paint your home, it is important to understand the effect paint colours can have on the performance of construction products.

As Weathertex is a timber product, its dimensions will expand and contract with changes in moisture content. Dark paint colours can allow surfaces in warmer climates to become very hot in direct sunlight leading to loss of moisture and subsequent shrinkage of the panel. Selection of light paint colours with high Light Reflectance Values (LRV) will lead to better thermal efficiency of the building, improve the maintenance cycles of paint coatings and sealants while minimising the thermal expansion and contraction of all construction components. With darker paint colours we recommend prepainting the ends of the panel prior to installation of joining/corner accessories.



# 1.6 Staining: Natural Range

#### 1.6.1 NATURAL PRODUCTS

The Weathertex Natural Range are uncoated hardwood timber products that will fade to a rustic grey with UV exposure just like raw timber. Manufactured with a mixture of native Australian eucalypt species, the original colour and greying process can vary due to the seasonal variation of harvesting areas.

Weathertex Natural may be left raw to grey off, be stained with a quality decking stain to maintain the rich appearance of new timber / stained with a controlled erosion stain for timber to mimic greying off and maintained as per below.

#### NOTES:

- 1. Painting Natural range with a standard top coat (paint) finish or a clear coat will void the manufacturer's warranty. If a top coat finish is to be applied, it must be onto Weathertex's pre-primed products.
- 2. Varnishes, oils & clear coats are not suitable for external applications of Weathertex products. They do not provide adequate UV protection, their inflexibility can result in cracking/crazing and when externally exposed can cause irregular and blotchy surface aesthetics. It is the customer's responsibility to confirm coating suitability from the coating manufacturer.

#### SURFACE PREPARATION - CLEANING & WASHING:

After installation, prepare the surface by removing dust and contaminants with an Oxalic Acid based timber cleaner solution. A soft broom or cloth may be used to gently scrub all surfaces. Wash down with fresh water and allow to completely dry. Not allowing the board to dry before coating is a common cause of coating failure. Failure to properly prepare the surface may result in poor adhesion and may void the coating manufacturer's warranty. Never use high pressure washers as this can cause coating or even board damage and water ingress into the wall cavity.

#### 1.6.2 STAINING NATURAL PRODUCTS

#### STAINING:

Apply 2-3 coats minimum of a recommended water based deck stain in accordance with the staining manufacturer's application instructions. It is best to brush apply staining to ensure proper penetration into the woodsman featured surface. Cutting in should be performed after the first coat is applied to avoid a dry-line border in the finish. Weathertex Natural may also be left to lighten before staining for different colour results. Staining providers offer a wide range of colours that may be used and a test sample should always be performed to confirm colour expectations and performance before staining.

#### COATING WITH A CONTROLLED EROSION STAIN PRODUCT:

Apply a controlled erosion stain in a colour that is in accordance with the staining manufacturers instructions. Weathertex Natural may also be left to lighten before staining for different colour results. Staining providers offer a wide range of colours that may be used and a test sample should always be performed to confirm colour expectations and performance before staining.

#### WEATHERTEX LEFT NATURAL (UNCOATED):

Left to weather naturally by the sun, the uncoated timber will lighten and "grey off" over time similar to raw hardwood. The degree and speed of colour change will depend on the intensity of UV exposure. The design of the installation must allow for consistency of sun exposure as shade lines caused by other features will result in colour variation and inconsistent weathering patterns. When allowed to weather naturally some small black spots on the surface may become more visible. This is carbon which is inherent within raw timber and the manufacturing process. These small black spots are not mould and will not affect the performance or longevity of the product.

**NOTE**: Natural Products are composed of unsealed natural hardwood timber which may occasionally exhibit tannin bleeding. Consideration must be taken if installing unsealed Weathertex products above porous or light coloured features.



### 1.7 Maintenance

#### 1.7.1 PRE-PRIMED PRODUCTS

The extent and nature of maintenance will depend on the geographical location and exposure of the installation. Regularly wash the painted surface with mild soapy water to remove dirt and grime to improve the performance of the coating. Never use high pressure washers as this can cause coating damage and water ingress into the wall cavity.

Thoroughly inspect topcoat paint work at the end of year 1 and repair areas of damage/coating breakdown according to the original paint specification or approved equivalent. Repeat inspection process at year 5 and based on the results of this condition survey make a decision on future maintenance actions, which may include touch up/repair of areas or a full re-coat.

Additional basic maintenance tasks include but are not limited to; controlling vegetation and garden beds close to the installation, keeping gutters and pipes clear, addressing potential moisture damage due to overflows and replacement of penetrations, flashings and sealants used in installation as required.

Generally, exterior surface coatings deteriorate by chalking rather than flaking. When repainting becomes necessary and the surface is unbroken, remove loose chalk by lightly sanding and follow the preparation steps above. Reapply new coatings in accordance with the paint manufacturer's instructions.

#### 1.7.2 NATURAL PRODUCTS

The extent and nature of maintenance will depend on the geographical location and exposure of the installation. Weathertex may be periodically cleaned with mild soapy water or a suitable timber cleaner. Do not use high pressure washers as this can cause coating damage and water ingress into the wall cavity. Additional basic maintenance tasks include but are not limited to controlling vegetation and garden beds close to the installation, keeping gutters and pipes clear, addressing potential moisture damage due to overflows and replacement of penetrations, flashings and sealants used in installation as required.

Thoroughly inspect any coatings at the end of year 1 and repair areas of damage/coating breakdown. Repeat inspection process at year 3 and based on the results of this condition survey make a decision on future maintenance actions, which may include touch up/repair of areas or a full single coat.

Generally, semi-transparent decking stains and controlled erosion stains are softer and less UV resistant than regular exterior paint resulting in a 3 - 5 year recoating cycle. When re-coating becomes necessary follow the preparation and coating steps above. A darker / more opaque stain colour may be required in time to maintain the desired colour of the boards.



**0 MONTHS:** Recently built, this shows the beginning colour of Weathertex Natural boards.



4 MONTHS: The board shows signs of lightening.



**36 MONTHS:** The boards are now very light, and are about to begin to be restored.



**STAINING:** Stain in the same direction that the boards run eg. Vertical for vertical cladding.

Failure to follow any of the above preparation instructions may void warranty of the product.

NOTE: Rate of fading may vary from above photos depending on environmental factors.

### 1.8 Steel Frames

The following information applies to Weathertex installed on 0.55 BMT minimum steel frames. Installing Weathertex onto a steel frame is generally similar to installing Weathertex on a timber frame. There is however some differences of which the installer must be aware and the following section outlines the technical information unique to steel frame installation.

#### 1.8.1 FASTENERS

Appropriate fasteners must be used when installing onto steel frames. See the Fasteners Section and in relevant product section to select the correct fastener. Do not tap home under-driven gun nails as this can break the holding power of the fastener. Incorrectly shot nails should be removed and refastened at least 15mm away from the original fastener position.

#### 1.8.2 INSTALLATION

Since 2007 there has been a Thermal Break provision within the Energy Efficiency requirements of the NCC. The provision is included to prevent thermal bridging across the wall cavity. Thermal bridging is a leakage of heat through a conductive path such as metal framing. Thermal bridging causes a reduction in the overall R-value of the wall system, significantly reduces the efficiency of the building's heating and cooling systems and can lead to condensation problems in the wall cavity.

In accordance with the NCC a rigid thermal break with R-value no less than 0.2 must be installed between the Weathertex external cladding and the metal framing members to separate both elements.

When installing Weathertex on a Steel Frame, thermal break battens create a cavity system. Refer to cavity fix construction details for more guidance. Butt-join the stud battens leaving a 5mm gap. Weathertex recommends the following two options as suitable thermal breaks.

#### 1.8.3 RECOMMENDED THERMAL BREAKS

**Softwood timber battens** are easily installed to provide a suitable thermal break between Weathertex and a steel frame. The softwood timber battens shall be 20mm deep and wide enough to cover the face of the frame. For example if 70x35mm steel frame is chosen, the battens shall be 20x35mm at suitable length.

A suitable membrane must be installed between the steel frame and battens; see section on Wall Sarking Requirements. The membrane must be held in place temporarily, using suitable fasteners or the timber battens, before the battens and the Weathertex are installed.

Final fixings will hold battens firmly in place but they must be temporarily fixed to the frame at 600mm centres before the cladding can be installed.

**Extruded polystyrene strips** are an alternative to softwood timber battens for a thermal break solution. The extruded polystyrene strips shall be 12mm deep and wide enough to cover the face of the frame. For example if a 70x35mm steel frame is chosen, the battens shall be 12x35mm at suitable length.

Nails or screws cannot be used to secure expanded polystyrene strips to the frame. Instead, double-sided adhesive tape or construction adhesive is suitable to hold the strips in place on the frame. Final fixings will hold extruded polystyrene strips firmly in place.

#### 1.8.4 CAVITY CLOSER


To protect against vermin and other material entering the cavity, the base of the cavity must be sealed using the Weathertex Large or Small Cavity Closer. A cavity closer must be installed at the base of the wall and above window heads and inter-storey flashings. The bottom of each batten is inserted into the cavity closer.

- Use 20mm Large Cavity Closer when using 20mm softwood timber thermal break battens (Applicable for all products).
- Use 10mm Small Cavity Closer when using polystyrene thermal break strips (Applicable for all products).

Fix the cavity closer to the base plate at 300mm centres. Butt-join cavity closers with max 2mm gap as required and ensure the closers are fixed in a straight, level line. It is important that the openings in the cavity closer are kept clear and unobstructed to allow free drainage and ventilation of the cavity.

#### 1.8.5 INSTALLATION

Once the wall has been battened out as per cavity construction details, Weathertex's product specific standard fixing instructions shall be followed to install the cladding on to the frame. The bottom edge of the starter strip must not be above the bottom edge of the cavity closer.

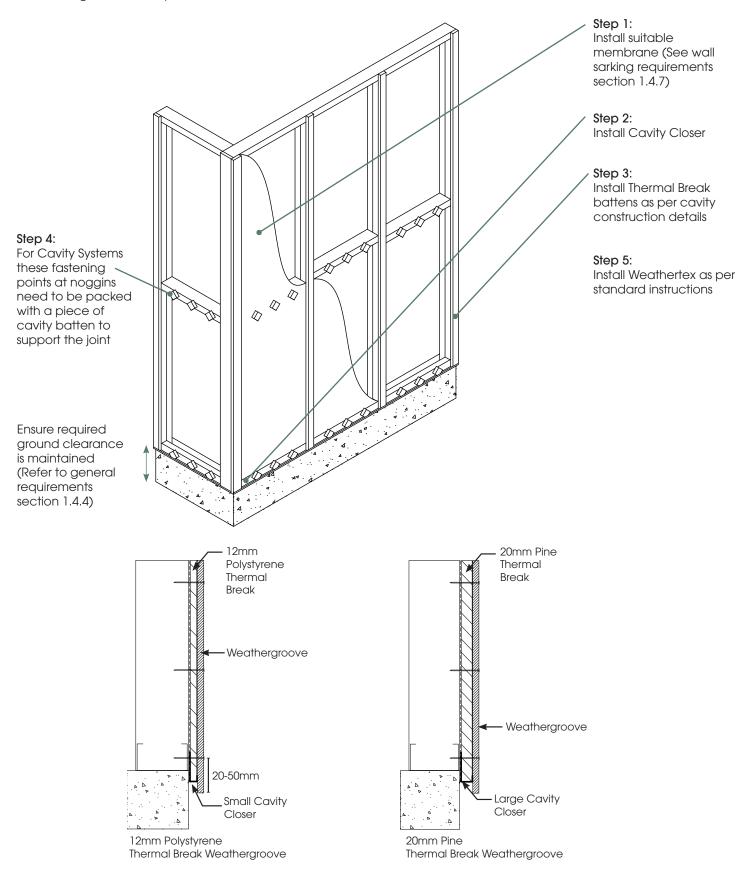

## 1.9 Cavity System

To provide the best protection for your wall against moisture and mould related problems Weathertex highly recommends the use of a cavity fixing system. Fixing over the Weathertex cavity system provides the best defence for your internal lining, frame, insulation and cladding against sick home syndrome. A cavity system creates a space within the wall that allows airflow to remove any moisture that accumulates in this space either from wind driven rain or condensation.

#### 1.9.1 PREPARATION

Minimum requirements for fasteners must be followed when installing the Weathertex Cavity System. See the Fasteners Section when selecting appropriate fasteners.

A suitable membrane must be installed between the timber frame and battens; see section on Wall Sarking Requirements. The membrane can be secured by the timber battens as they are installed along a wall.

Care should be taken when installing bulk insulation to ensure the stud cavity is not over-filled. Over filling the stud cavity with bulk insulation will impinge in the cavity created by the cavity battens and hence reduce its effectiveness, and may void warranty.

#### 1.9.2 CAVITY BATTENS

Cavity battens provide the separation between the membrane on the wall frame and the cladding. Weathertex provides and recommends the use of Weathertex Cavity Battens which are 1220 x 45 x 9.5mm. Check your local regulations and/or certifiers for recommended batten thickness. If using battens other than Weathertex supplied cavity battens, fastener lengths should be increased to accommodate the batten thickness.

Refer to Weathertex Cavity Fix Construction Details when installing Weathertex cavity battens. Cavity battens must be fastened to framework at a maximum of 600mm centres. Butt-join the stud battens leaving a 5mm gap.

#### 1.9.3 CAVITY CLOSER


To protect against vermin and other material entering the cavity, the base of the cavity must be sealed using the Weathertex Large or Small Cavity Closer. Designed not to interrupt airflow in the cavity, a cavity closer must be installed at the base of the wall, above window heads, inter-storey flashings and at other points where a cavity is created by the design. The bottom of the battens is inserted into the cavity closer.

• Use 10mm Small Cavity Closer for Weathergroove

Fix the cavity closer to the base plate at 300mm centres along the closer with 30 x 2.8mm flat head galvanised nails. Butt-join the cavity closers with a max 2mm gap and ensure they are fixed in a straight, level line. It is important that the openings in the cavity closer are kept clear and unobstructed to allow free drainage and ventilation from the top to the bottom of the cavity.



#### 1.9.4 INSTALLATION

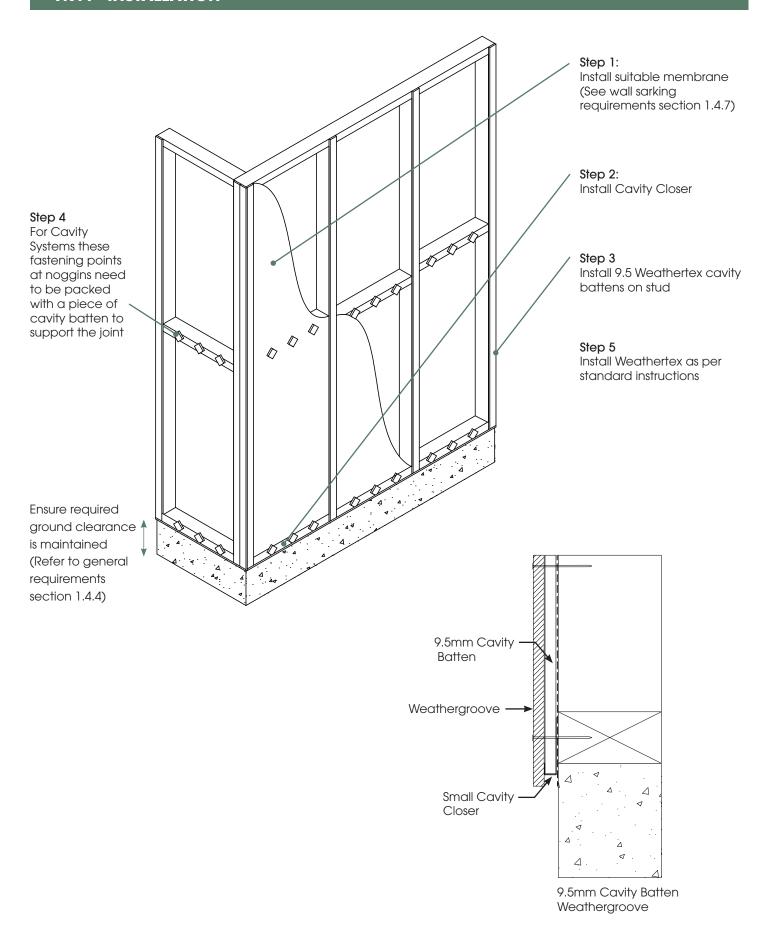

## 1.10 Physical Properties

#### WEATHERTEX WEATHERBOARDS AND ARCHITECTURAL PANELS.

Weathertex weatherboards and architectural panels have been comprehensively tested to Australian and International Standards for verification of compliance to the Building Code of Australia.

#### MATERIAL DURABILITY PROPERTIES

The Product Specification Standard for Weathertex is AS/NZ\$1859.4 - Wet Processed Fibreboard for Exterior Conditions (HB.E).

PROPERTY	STANDARD	RESULT	REQUIREMENT
Dimensions	AS NZS 4266.1	PASS	±2mm/m
Density	AS NZS 4266.1	1000 kg/m³	> 750 kg/m³
Bending Strength	AS NZS 4266.1	32 MPa	> 20 MPa
Modulus of Elasticity	AS NZS 4266.1	4500 MPa	> 2900 MPa
Equilibrium Moisture Content	AS NZS 4266.1	7.5%	7.5% ± 1% @ Factory gate
Dimensional Stability – Hygro-Expansivity	AS/NZS 4266.1	0.16% change in face dimensions over the range of 35%-80% relative humidity	N/A
	AS NZS 4266.1 - 24	< 2% Swell	8% Max.
Moisture Resistance	Hour submersion	< 6% Absorption	12.5% Max.

#### THERMAL AND ACOUSTIC PROPERTIES

PROPERTY 9.5MM COMPONENT VALUE		WEATHERTEX SYSTEM			
Thermal Conductivity	0.22 W/mK	Where thermal and acoustically rated walls are required			
Thermal Resistance	0.04 m <sup>2</sup> K/W	Weathertex can be used as part of wall systems to meet			
Acoustic Properties (Rw)	System Dependant	your specific performance requirements.			

#### FIRE PROPERTIES

PROPERTY STANDARD		RESULT	REQUIREMENT
Bushfire Attack Level (BAL)	AS 3959	Up to and including BAL 19	BCA: Vol. 1 - G5.2 BCA: Vol. 2 - 3.10.5
Average Specific Extinction Area	AS/NZS 3837	38.7 m²/kg	BCA: Vol. 1 - C1.10
Material Group Number	AS/NZS 5637.1	Group 3	BCA: Vol. 1 - C1.10 BCA: Vol. 1 - Spec C1.10 - 4
Early Fire Hazard Indices	AS 1530.3	Ignitability: 12 Spread of Flame: 5 Heat Evolved: 4 Smoke Developed: 2	BCA: Vo1. 1 - C1.10
Fire Resistance Level (FRL)	AS1530.4	Systems up to 120/120/120 available	BCA: Vol. 1 - Spec C1.1
Combustibility	BCA: Vol 1 - C1.1	Type C Compliant*	BCA: Vol 1 - C1.1

<sup>\*</sup> A class 2,3 or 9c building with a rise in storeys of 2 may be of type C construction it requirements of C1.5 are satisfied.

#### MISCELLANEOUS PROPERTIES

Formaldehyde Classification	AS/NZS 4266.16 Test Method: <0.07 mg/L - Emission Class Super EO

Weathertex contains no silica, resins, binders or added formaldehydes and the results above confirm the amount naturally present in hardwood timber is negligible and well below the acceptance level of 1.0mg/L (E1).

### 2.1 WEATHERGROOVE Panels

#### **WEATHERGROOVE PANEL BENEFITS**

Weathergroove is the ideal choice for urban contemporary projects. It's the tallest panel available in the Australian market, making this vertically grooved panel ideal for covering large areas in a short time and it's versatility offers endless possibilities.

Width: All panels are 1196mm wide

#### Features & Benefits

- Tallest panel size in Australia 3.66m height.
- Off stud joining option enables minimal waste and less timber stud layout.
- Quick cost effective installation.
- Watertight mechanical joining system.
- Range of joining systems for various design options.
- Deep vertical lines for a bold expression.
- Universal edge which makes it possible to flip and reuse offcuts.
- Durable with 25 years warranty (pre-primed) and 10 years warranty (Natural).

#### WEATHERGROOVE PRODUCT RANGE

Thickness: All panels are 9.5mm thick



WEATHERGROOVE 75 WOODSMAN 3660mm x 1196mm



150 SMOOTH 3660mm x 1196mm 2745mm x 1196mm 2440mm x 1196mm

**WEATHERGROOVE** 



WEATHERGROOVE 150 RUFF-SAWN 3660mm x 1196mm



150 WOODSMAN 3660mm x 1196mm 2745mm x 1196mm

2440mm x 1196mm



300 SMOOTH 3660mm x 1196mm 2745mm x 1196mm

WEATHERGROOVE



**WEATHERGROOVE** 

75 SMOOTH

3660mm x 1196mm

**WEATHERGROOVE 600 SMOOTH** 

3660mm x 1196mm



1200 SMOOTH

3660mm x 1196mm 2745mm x 1196mm



**WEATHERGROOVE** 1200 WOODSMAN

3660mm x 1196mm



WEATHERGROOVE **FUSION SMOOTH** 

3660mm x 1196mm



**WEATHERGROOVE** 75 NATURAL

3660mm x 1196mm



150 NATURAL

3660mm x 1196mm



WEATHERGROOVE 300 NATURAL

3660mm x 1196mm



WEATHERGROOVE 1200 NATURAL

3660mm x 1196mm



WEATHERGROOVE FUSION NATURAL

3660mm x 1196mm



RESPONSIBLE WOOD CERTIFIED

This product is from sustainably managed forests and controlled sources




To view Weathertex product codes scan QR code.



# 2.2 Accessories

2.2.1 TRIMTEC ACC	ESSORIES *Made from and	dised aluminium	
PRODUCT	PRODUCT IMAGE	LINE DRAWING	DIMENSION
SMALL INTERNAL LF CORNER		c b	L = 3660mm a = 27mm b = 11mm c = 55mm
SMALL EXTERNAL LF CORNER		c	L = 3660mm a = 27mm b = 11mm c = 31mm
SMALL END STOP			L = 3660mm a = 27mm b = 11mm c = 45mm
SMALL INTERNAL CORNER		b Xa	L = 3660mm a = 4mm b = 11mm c = 35mm
SMALL EXTERNAL CORNER		c / b	L = 3660mm a = 17mm b = 11mm c = 35mm
WEATHERGROOVE JOINER		c b a	L = 3660mm a = 12mm b = 5mm c = 50mm

2.2.2 TRIMTEC ACCE	SSORIES *Made from	anodised aluminium	
PRODUCT	PRODUCT IMAGE	LINE DRAWING	DIMENSION
<b>Z FLASHING</b> An alternative for general horizontal joins		p   a	L = 3660mm a = 27mm b = 10mm
SMALL Z FLASHING  For general horizontal joins		c	L = 3670mm a = 10mm b = 10mm c = 74mm
SMALL CORNER PLUG		Use with the Small externo	al corner

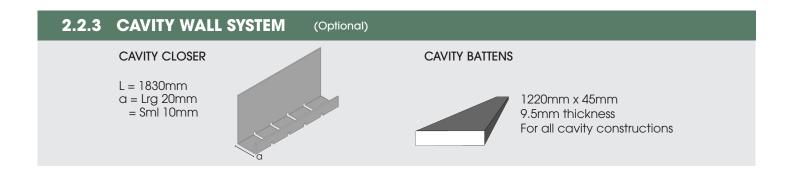

### 2.3 Fasteners

Refer to the Wind Tables below when selecting a fastener. For wind ratings above N4 and C2 please contact Weathertex Technical on (ph: 1800 040 080). Installers must assure themselves that the appearance of the selected fastener is suitable for the intended use. Generally, head sizes in excess of 6mm or T and D head shaped nails may not produce a satisfactory finish on face fixed profiles.

- Stainless Steel ND50's recommended for ruff-sawn, woodsman & natural profiles. They are not recommended for smooth profiles as they may create an undesirable surface finish.
- 2.5mm Ring shank nails recommended for smooth profiles.
- Countersunk screws 2mm below the board surface & filled are recommended for completely concealed fixing of smooth profiles.

2.3.1 RESIDENTIAL WIND TABLE - AS 4055 WIND CLASSIFICATION									
							Maximum S	tud Spacing	
Frame	Extend fastener length when packing distance exceeds the following	Fasteners		Maximum fastener spacing at intermediate studs + noggings	Non- Cyclonic Wind	Cyclonic Wind	General Areas of Walls	Within 1200mm of building edges	
					N1, N2	><	600	600	
MGP10		Paslode ND50 SS Product	45mm x 2.5mm	300	N3	C1	600	450	
Timber	Direct to frame	Code:B20054A & B20665 (Brad &	Ring Shank		N4	C2	600	300	
Minimum		Fuel pack)	Nail	150	N1, N2, N3	C1	600	600*	
				130	N4	C2	600	450	
				300	N1	><	600	600	
MGP10 Timber Minimum	10mm	Buildex Treated Pine 8x50mm Countersun Head Screw		300 ne 10g		><	600	400	
					N1, N2	><	600	600	
IVIIIIIIIIIIIII		Product Code: X503298		150	N3	C1	600	450	
					N4	C2	600	300	
		SCROOZ 8g x 42mm Fibre Cement Board Screw			N1, N2	><	600	600	
0.55mm/	20mm		n FibreFiv	m EibroEiv	300	N3	C1	600	450
G550 Steel Minimum			Screw		N4	C2	600	300	
thickness		Product Code: FF	5008421	150	N1, N2, N3	C1	600	600*	
				150	N4	C2	600	450	
					N1, N2	><	600	600	
0.75mm/		Iccons SD CSK CC	DARSE C3	300	N3	C1	600	450	
G550 Steel Minimum	12mm	10-16 X 40mm Product Co			N4	C2	450	300	
Thickness		SDCSC1040	C3	150	N1, N2, N3	C1	600	600*	
				150	N4	C2	600	450	
				200	N1,	><	600	450	
0.75mm/		1000pg 2D C2/\\!\:	a Ca 10 14	300	N2	> <	600	400	
G550 Steel Minimum	20mm	Iccons SD CSK Wing x 45mm Scr	ew		N1, N2	><	600	600	
Thickness		Product Code:	IP/23	150	N3	C1	600	450	
					N4	C2	600	300	

<sup>\*</sup>Reduce to 450mm centres for N3/C1 Weathergroove 75mm & Fusion

#### 2.3.2 COMMERCIAL WIND TABLE - AS/NZS 1170.2 WIND LOADS pressures are limit

 
Note: Serviceability Limit State (SLS) wind pressures are limited to +1 kPa, -1.5 kPa for V2.2 1/FV1.1 Weatherproofing

					V2.2.	1/FV1.1 Weatherpro	ofing	
	Extend fastener			Maximum		nd Pressure (Ulti		
Frame	length when packing distance exceeds the	Fastener		Stud Spacing	Maximum intermediate Stud & Nogging fastener spacing (mm)			
	following			op and a	300	200	150	
		45 x	(	600	1.5*	1.5*	1.5*	
MGP10 Timber Min-	Direct to frame	2.5mm	Paslode ND50 SS Product Code:	450	2	3.5	3.5	
imum	Direct to traine	Ring Shank	B20054A & B20665	400	2.5	4	5	
		Nail	(Brad & Fuel pack)	300	3.5	5	7	
		Puildo	y Tractad Dina 10a	600		1.5*	1.5*	
MGP10 Timber Min- imum	10mm		x Treated Pine 10g m Countersunk Rib	450	1	1.5	2	
		Head Screw Product Code: X503298		400	1	2	2.5	
				300	1.5	2.5	3.5	
	20mm	SCROOZ 8g x 42mm FibreFix Cement Board Screw Product Code: FFSC0842T		600	1.5*	1.5*	1.5*	
0.55mm/G550 Steel				450	2	3.5	3.5	
Minimum Thickness				400	2.5	3.5	5	
				300	3.5	5	7	
		locops	SD CSK COARSE C3	600	1.5*	1.5*	1.5*	
0.75mm/G550 Steel	12mm		6 X 40mm screw	450	2	3	3.5	
Minimum Thickness	1211111		roduct Code:	400	2	3	4.5	
		SDCSC1040C3		300	3	4.5	6	
				600		1	1.5*	
0.75mm/G550 Steel	20mm		SD CSK Wing Cs 10- x 45mm screw	450	1	1.5	2	
Minimum Thickness	Zurnm		uct Code: TP723	400	1	1.5	2.5	
				300	1.5	2.5	3	


<sup>\*</sup>Reduce to 1 kPa for Weathergroove 75mm & Fusion

#### Fastener & Wind Table Requirements and Recommendations

- Wind classification results have been conducted allowing for maximum packing distances specified in the tables. The fastener length must be increased to accommodate for the thickness of larger battens and/or additional packing materials to ensure the same penetration into the structural subframe."
- The above tables are relevant for on & off stud joining methods for timber frames, and on stud applications for steel frames. Off-stud applications on steel frames are only permitted when steel nogging is a structural element.
- The spans of the cladding panels shall be continuous spans of 2 spans or greater. Simply supported spans are not permitted.
- Span/150 serviceability limit state deflection criteria.
- All fasteners must be galvanised or suitably coated to resist corrosion for external application (Australian Standard AS 3566, Class 3
  for screws). When installed in high corrosion zones such as coastal locations, fasteners (nails and screws) must be made of materials
  appropriate to the desired life of the system and geographical location. Stainless Steel Nails and Class 4 Screws may be necessary in
  these zones. The advice of the fastener supplier should be sought.
- Bradnails are not recommended for use on Smooth profiles as they may create an undesirable surface finish. Bradnails are an excellent choice for use with Woodsman and Ruff-Sawn textures.
- For Natural range use stainless steel fasteners only.



When using countersunk screws, these may be countersunk 2mm below the board surface and filled with a high quality proprietary grade, acrylic-based flexible paintable filler. Non-flexible epoxy based fillers are not suitable and may crack and fail with movement of construction components. If using a smart-bit style countersinking tool; the gauge of the screw must match the gauge of the tool to prevent movement issues. Screw holes should be spray primed after screwing. Filler should be sanded and area re-primed prior to painting.

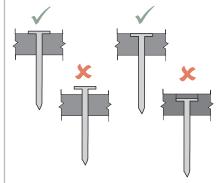

Nails must be finished flush to the board surface and not be punched and filled. Punching will significantly reduce the holding capacity of the fastener and damage the integrity of the board surface.

### 2.4 INSTALL: Weathergroove

#### 2.4.1 FRAME PREPERATION

The following product specific installation instructions are applicable for both direct fix (timber frame) and cavity fix (timber and steel frame). Installation instructions in this section are to be used in conjunction with information and requirements given in previous sections and all national and state building codes.

Stud spacing to be selected by the building designer using the wind tables based on the wind classification to a maximum of 600mm. Sheet installed width nominally 1200mm.


#### 2.4.1.1 OFF-STUD JOINING

Stud frame to be supported by flush noggings at maximum 750mm centres where an off stud will occur. Check and straighten substructures as required.

Plan panel layout so off-stud joints occur approximately mid span between studs. The first panel may need to be a part panel.

If you are using horizontal joints you will need to ensure it is supported by a double or rotated noggings; please see z flashing details for additional frame requirements based on your choice of accessory.

For cavity installation see cavity systems (section 1.9)/steel frames (section 1.8). For direct fix install compatible wall sarking prior to installation, refer to AS 4200.2.

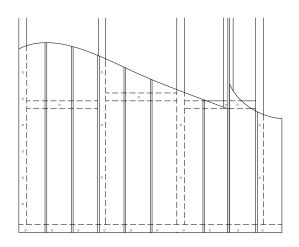


#### 2.4.1.2 ON-STUD JOINING

Framing must be planned so all vertical joints occur on double studs or a rotated 90mm timber back block centred on the join.

Check and straighten sub-structures as required.


If you are using horizontal joints you will need to ensure it is supported by a double or rotated nogging; please see z flashing details for additional frame requirements based on your choice of accessory.

For cavity installation see cavity systems (section 1.9)/steel frames (section 1.8). For direct fix install compatible wall sarking prior to installation, refer to AS 4200.2.

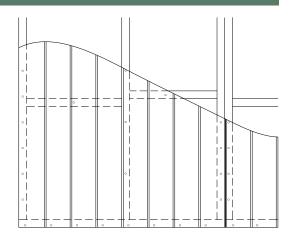

#### 2.4.2 BASE OF THE WALL

- 1. Establish a horizontal datum or base line at least 20mm below the base of the frame.
- 2. Install Alcor flashing for separation between Weathertex and masonry.
- 3. Install corners to the frame (note: Sarking must be installed first).

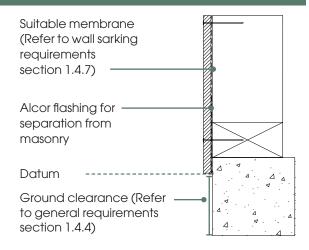


#### 2.4.3 VERTICAL JOINING

#### 2.4.3.1 VERTICAL JOINING: ALUMINIUM WEATHERGROOVE JOINER

- 1. Inset the panel edge into the corner accessory, align the bottom edge with the datum and use a single fastener at a corner to temporarily hold the panel.
- 2. Adjust the panel so that the panel grooves are vertical before fixing off temporarily with a fastener at the opposite corner.
- 3. Slide the Weathergroove Joiner onto the rebated vertical joining edge and fasten off through the exposed back flange at the centre nogging with a flat head or screw (this will stop the joiner slipping after installation).
- 4. Install successive panels in the same way using the Weathergroove Joiner.

#### NOTES:

- Can be used on and off stud with all products.
- Do not fix through the Aluminium Weathergroove Joiner
- It is advisable to prepaint panel sides when using Weathergroove Joiners to avoid white lines either side of the Accessory after possible contraction of construction components in dry conditions.

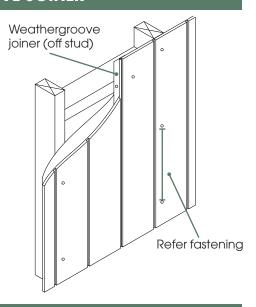


#### 2.4.3.2 VERTICAL JOINING: ON STUD BUTT JOIN (NATURAL ONLY)

- 1. Install 100mm wide Alcor bitumen flashing over the sarking at each planned vertical joint.
- 2. Before installing the first panel, run a 5mm bead of suitable, flexible sealant along the length of the Alcor flashing to seal the edge of the Weathergroove panel.
- 3. It is standard to start at a corner with a cut panel to ensure the first joint is located on the planned double stud supports. Insert the cut edge into the corner accessory, align the bottom edge with the datum and use a single fastener at a corner to temporarily hold the panel.
- 4. Adjust the panel so that the grooves are vertically level before fixing off temporarily with a fastener at the opposite corner.
- 5. Weathergroove has a unique rebated edge that forms a regular groove when installed with an appropriate control gap. When joining panels, leave a 2mm gap in between panels to maintain the standard spacing of the grooves. Before installing the next panel, run a 5mm bead of suitable, flexible sealant along the length of the Alcor flashing to seal both edges of the Weathergroove panel.

**NOTE:** Natural products are composed of unsealed natural hardwood timber which may occasionally exhibit tannin bleeding. Consideration must be taken if installing unsealed Weathertex products above porous or light coloured features.

NOTE: Natural only - butt join not permitted with pre-primed.

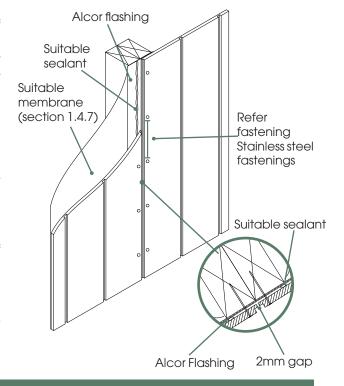


#### 2.4.4 HORIZONTAL JOINING

Horizontal joins must be flashed using the Aluminium Z Flashing or Small Aluminium Z Flashing, refer to the Accessories Section. All horizontal joins must be supported by a double or rotated nogging. Install the accessory first before fastening off the top edge of panels. The standard Trimtec Z Flashing (instead of small Z Flashing) should be used where relevant between storeys to allow for frame settling and floor compression.

The top panels should be installed such that the bottom of these panels rest on the spacer bead of the z flashing. Install successive panels in the same way using the Z-flashing for horizontal joints.

NOTE: for natural Weathergroove ensure the Alcor flashing for the vertical join runs under the Z flashing.

### 2.4 INSTALL: Weathergroove

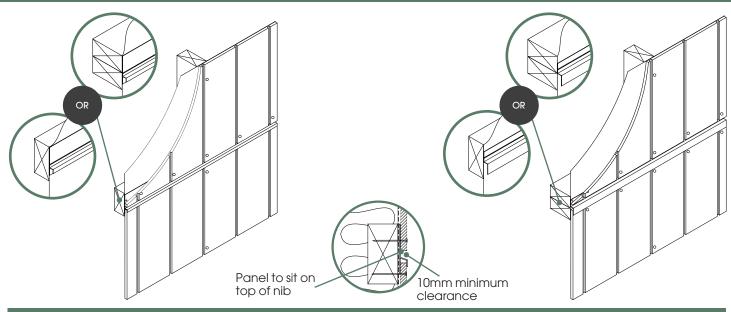

#### 2.4.5 CONSTRUCTION DETAILS

Please refer to Weathertex Direct Fix Installation - Weathergroove, Drgs. of 15.04.20 (9 pages), and Weathertex 9.5mm Cavity Installation - Weathergroove, Drgs. 15.04.20 (9 pages) for details relevant to the Weathergroove Weatherproofing Appraisal.


#### 2.4.6 FASTENING

#### 2.4.6.1 FASTENING: OFF STUD

Panels must be fastened at 150mm centres across the top and bottom of the panel and wall edge. All intermediate studs and noggings must be fastened in accordance with the appropriate fixing pattern and fastener installation requirements in section 2.3. Intermediate panel edges should be fastened to the nogging either side of the joint. For Cavity Systems these fastening points at noggins need to be packed with a piece of cavity batten to support the joint.

#### NOTES:


- Perimeter fixings should be a minimum of 12mm from the panel edge.
- Fasteners must not be placed in the panel grooves.

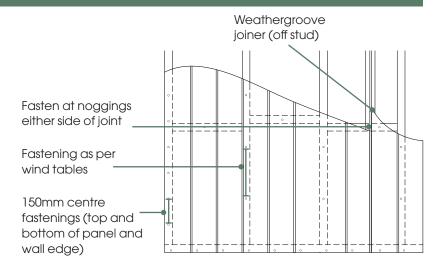

#### 2.4.6.2 FASTENING: ON STUD

Panels must be fastened at 150mm centres across the top and bottom of the panel and at studs along both vertical edges. All intermediate studs and noggings must be fastened in accordance with the appropriate fastener pattern and fastener installation requirements in section 2.3.

**NOTE:** Perimeter fastenings should be a minimum of 12mm from the panel edge and not be placed in the panel grooves.

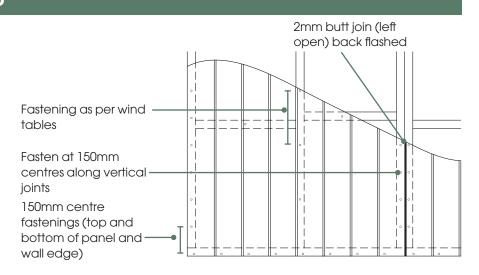

#### MANUFACTURER'S WARRANTY

- Weathertex Pty Ltd A.B.N 67 084 713 986 ("Weathertex") warrants that the Products supplied are of first quality, free from material defect in materials, design and workmanship, and in conformity with the technical specifications detailed in the published Weathertex Installation Guide that is current at the date of purchase. This statutory warranty applies for a period of 12 months from the date of purchase in addition to the following clauses.
- Natural Board Weathertex warrants that its Natural (Brown) Board Products will not rot, split or crack for a period of 10 (ten) years from the date of purchase when installed and maintained in accordance with Weathertex's current published materials.

Pre Primed Classic Shingles Plus, EcoWall and Rubix Panel - Weathertex warrants that its EcoWall Products will not rot, split or crack for a period of 10 (ten) years from the date of purchase when installed and maintained in accordance with Weathertex's current published materials.

Pre Primed Board - Weathertex warrants that its pre primed board Products will not rot, split or crack for a period of 25 (twenty-five) years from the date of purchase when prepared, installed and maintained in accordance with Weathertex's current published materials.

- 3. A reference to Products in these warranty terms and conditions does not include accessory products listed "Accessories" in the Weathertex Price List ("Accessory Products"). Weathertex warrants that the Accessory Products will be free from defect in material and workmanship for a period of 7 years from the date of purchase. For the purposes of clarity, the warranties provided in clause 1 and 2 do not apply to Accessory Products.
- 4. The benefits to the purchaser given by the warranties set out in clauses 1 to 3 are in addition to other rights and remedies of the purchaser under Australian Consumer Law in relation to the Weathertex products and accessories.

#### CONDITIONS OF THE WARRANTY

- 5. The warranties provided in clauses 1, 2 and 3 are only available to the original purchaser ("Purchaser") who provides Weathertex with proof of purchase and who makes the claim in writing within 30 days from the point in time when the defect becomes apparent or should have become apparent.
- 6. Weathertex will not be liable for any warranty claims made under clauses 1 and 2 if any of the following apply:
  - (a) the Products are not installed used or maintained in accordance with applicable instructions and/or specifications, including installation and site conditions provided by Weathertex (including the published Weathertex Installation Guide that is current at the date of purchase);
  - (b) the building in which the Products are installed does not comply with all relevant Building Codes and Regulations, Standards, and Council/Authority/Regulator requirements;
  - (c) the Purchaser has not complied with any service instructions which Weathertex may give or any subsequent request as to a modification of the Products which Weathertex may make from time to time in writing:
  - (d) the defect is caused by the use of materials, parts or accessory products that are not supplied, recommended, or approved by Weathertex:
  - (e) the Products are not maintained, prepared or installed by authorised installation contractors in circumstances where Weathertex has directed the Purchaser to ensure that the Products are maintained, prepared or installed by such authorised installation contractors; or
  - (f) the repair, rectification or replacement of the Products is required as a result of normal wear and tear or necessitated in whole or in part by the fault or negligence of any person other than Weathertex.
- Further to clause 6 and without limiting clause 6, Weathertex under no circumstances will be liable for any claims, damages, or defects arising from or in any way attributable to:
  - (a) acts of God, fire, flood or other severe weather conditions or unusual climatic conditions;
  - (b) performance of paint/coatings applied to the Products;
  - (c) development of any algae, bacteria or fungi on the Products (whether on the exposed or unexposed surfaces);
  - (d) poor workmanship; or
  - (e) any other losses or damages (whether direct or indirect) including property damage or personal injury, consequential loss, economic loss or loss of profits arising in contract or negligence.
- 8. The Product is subject to natural variation in finish and presentation as a result of the manufacturing process. The purchaser / builder / installer must ensure the Product meets aesthetic expectations prior to installation. Subject to the terms and conditions of this warranty, after installation of the Product, Weathertex is not liable for claims arising from aesthetic surface variations if such variations were, or would upon reasonable inspection have been apparent prior to the installation.

#### **REMEDIES**

9. Should the Purchaser's warranty claim made under clauses 1 and/or 2

be valid within the relevant warranty period, then the remedy provided by Weathertex will be limited to either of the following (where possible) as chosen by Weathertex:

- (a) Weathertex replacing the Products provided the claim is accepted by Weathertex and subject to such replacement Products being available in the manufacturing inventory at the time the claim is accepted by Weathertex. Otherwise, Weathertex will provide such replacement Products when they become available.
- (b) Weathertex repairing the Products provided the claim is accepted by Weathertex.
- 10. Should the Purchaser's warranty claim made under clause 3 be valid, then the remedy provided by Weathertex will be limited to Weathertex replacing the Accessory Products provided the claim is accepted by Weathertex and subject to such replacement Accessory Products being available in the manufacturing inventory at the time the claim is accepted by Weathertex. Otherwise, Weathertex will provide such replacement Accessory Products when they become available.
- 11. The Purchaser is not entitled to any other remedies (that is apart from the remedies detailed in clauses 8 and 9) with respect to a warranty claim under clauses 1, 2 or 3.
- This warranty cannot be relied upon by any other person and is not transferable.
- 13. Any replacement works will be conducted in accordance with the Building Codes and Regulations, Standards, and Council/Authority Regulator requirements applicable at the time of construction. Where the Building Codes and Regulations, Standards, and Council/ Authority Regulator requirements have changed after the Products were purchased, Weathertex will not be responsible for any costs associated with ensuring that the replacement works comply with the updated Building Codes and Regulations, Standards, and Council/Authority Regulator requirements.
- 14. Where an approved claim requires re-coating of the Products the Purchaser acknowledges and agrees to accept minor colour variations between the existing or original colour and the re-coated replacement Products or rectification areas.
- 15. Except as provided for in these terms and to the fullest extent permitted by law, all terms, statements, warranties and conditions whether express, implied, statutory or otherwise, relating to the Products, the Accessory Products, the subject matter of these terms or to these terms generally are excluded. Nothing contained herein excludes or modifies any rights the Purchaser may have under the Australian Competition and Consumer Act 2010 (or equivalent in other countries as determined by Weathertex in its sole discretion).

#### DISCLAIMER

- 16. Recommendations made by Weathertex are based on good building practice and are not a complete statement of all relevant data. As the installation of the Products is influenced by and relies on factors outside the control of Weathertex, Weathertex assumes no responsibility for works/systems used in connection with the installation of the Products and their suitability to satisfy relevant Building Codes and Regulations, Standards, and Council/Authority /Regulator requirements.
- 17. Unless specifically stated otherwise, the warranties under clauses 1, 2 and 3 apply only to Weathertex products purchased and installed according to the Weathertex Installation Guide in Australia, New Zealand and the Weathertex International Installation Guide.

#### AUSTRALIAN CONSUMER LAW

18. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### MAKING WARRANTY CLAIMS

19. The claimant (being the Purchaser) must make all warranty claims in writing. The claimant must be the original purchaser of the Weathertex product and must retain the purchase receipt (in relation to the purchase of the product) as proof of purchase. Proof of purchase must be provided to Weathertex as part of the warranty claim.

Warranty claims (and claims for reasonable costs and expenses in making the claim as referred to in clause 18) can be addressed to Weathertex by post, fax or via e-mail as follows:

The Manager Weathertex Pty Ltd PO Box 21 Raymond Terrace NSW 2324 Phone 1800 040 080 Fax 1800 647 926 E-mail sales@weathertex.com.au

20. Weathertex will respond to all warranty claims. This response may include an inspection by a Weathertex representative of the installed Product. The claimant will bear all costs and expenses of making the claim. However reasonable costs and expenses will be reimbursed to the claimant in the event that the claim is accepted by Weathertex.

As of 14th August 2020.





Weathertex® is made in Australia by Weathertex Pty Ltd ABN 67 084 713 986

PO Box 21, Raymond Terrace NSW 2324

#### CONTACT WEATHERTEX FOR INFORMATION OR ADVICE

1800 040 080 | weathertex.com.au

When specifying or installing Weathertex products, please make certain that you have the most current installation manual and technical information. To view the latest installation manual, scan the QR Code or visit weathertex.com.au

UPDATED 2<sup>ND</sup> FEBRUARY 2022 VERSION WC020222

